

NUMMECH PRODUCTS

CONTOUR™ CAMERA LENS SHIELD

Installation:

Mount the lens shield around the front of your camera's rotating bezel, then gently tighten down the plastic frame's clamp screw until the shield is securely attached. Avoid overtightening the screw as to not damage the camera.

Please note that a thin strip of tape is applied to the inside of the lens frame to create extra flexibility. Once installed, the lens shield should tighten down secure enough to resist falling off on its own, however **you can gain a tighter fit by adding another small length of tape** (electrical tape, etc). This will create extra tension.

Lens replacement:

The lens shield uses a replaceable **lens insert** to protect the front of the Contour camera. The insert can be removed and replaced in case of damage or severe scratching; one spare insert is included, and additional inserts are available if you require additional replacements.

The insert is held in place using an aluminum **clamp ring** imbedded within the plastic frame. To remove the lens insert, first remove the clamp ring by gently expanding the frame until the ring has enough clearance to slip out. If necessary, use a small tool such as a screwdriver for leverage.

With the clamp ring removed, the lens insert will fall out the front. To install a new insert, follow the same procedure in reverse: first place the lens insert down inside the frame then expand it enough to slip the clamp ring into position.

